

Heated Seats Operation with Remote Controls

Once you have your new seat installed following the supplied directions it's time to get familiar with your new heat control remotes.

There are 2 remotes included in your heated seat package. Both will run front and rear seats.

The A button is the driver seat and B button is the passenger seat.

To turn the heat on push A or B once.

To turn the heat off push the same button A or B once.

Note: Turning the ignition off will also turn the heating elements off.



Enjoy the ride again on your Ultimate seats

Questions ??? call us on 1-877-672 0288

or email des@ultimateseats.com

Web site – www.ultimateseats.com