


USA • 877.672.0288 Canada • 800.818.6868

Ultimate Seats


Put Your Butt In Comfort Heaven

Aftermarket Passenger Backrest Pad Bolt Hole Measurements


Note: All measurements are taken from center bolt to center bolt.




Manufacturer: Aftermarket Unit

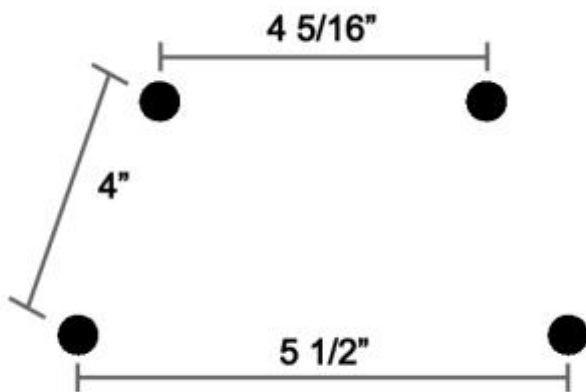


Manufacturer: Bestern

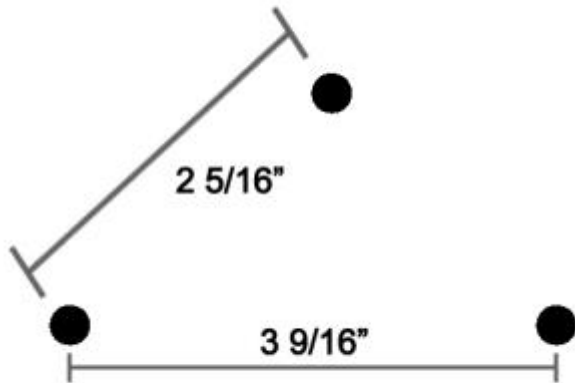


Manufacturer: Cobra
Model: Mini (12" - Square Tube)

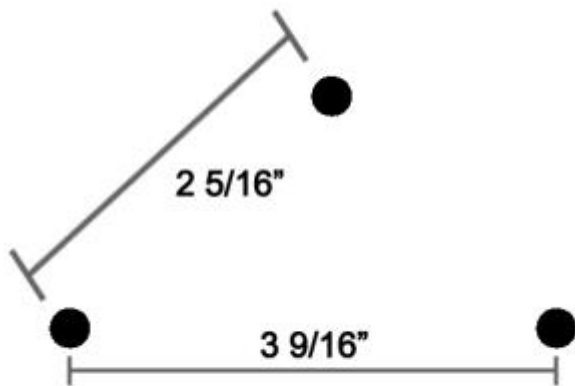

Manufacturer: Cobra
Model: Short (14" - Square Tube)

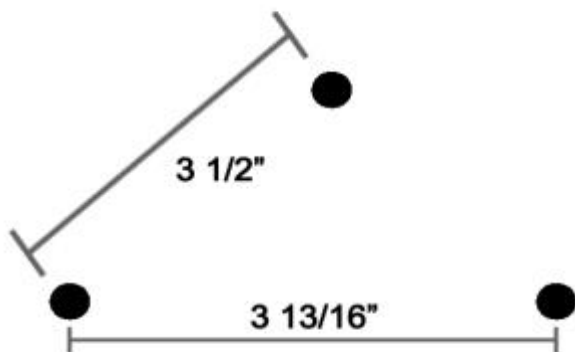


Manufacturer: Cobra
Model: Tall (17" - Square Tube)

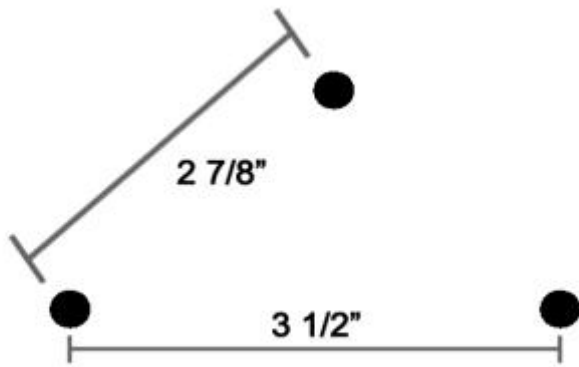


Manufacturer: Cobra
Model: Short / Tall (Round Bar)




Manufacturer: National Cycle
Model: Paladin (2-Hole)

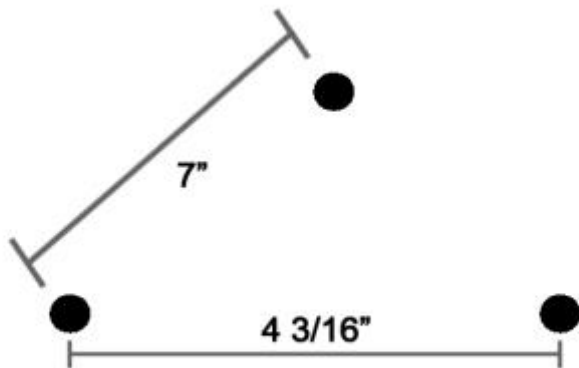


Manufacturer: National Cycle
Model: Paladin (3 Hole)

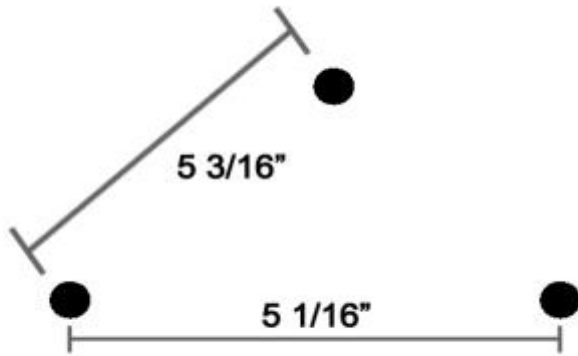


Manufacturer: Custom World
Model: (Wood Screws)

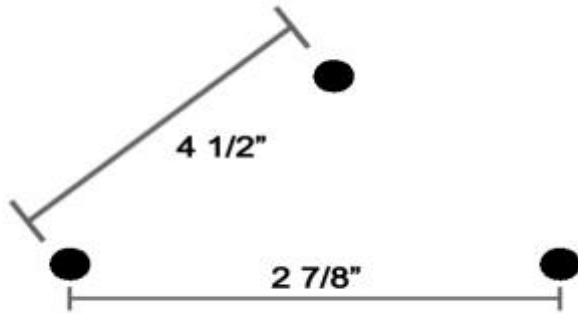


Manufacturer: MC Enterprises

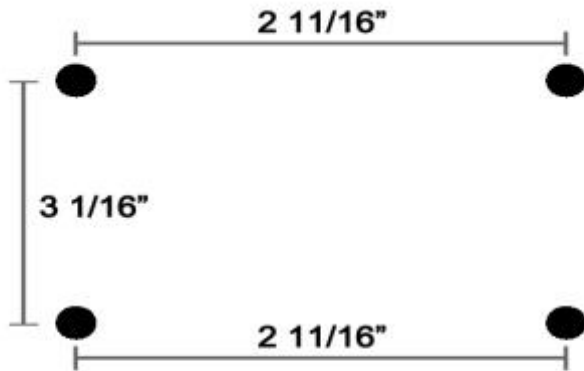


Manufacturer: Kuryakyn

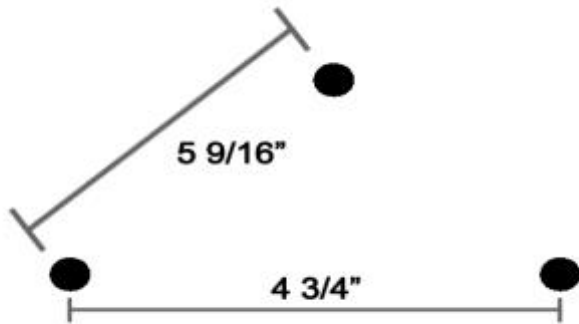


Manufacturer: Road Chrome

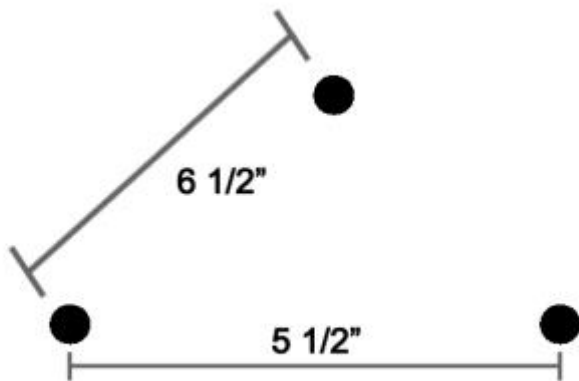


Manufacturer: Show Chrome

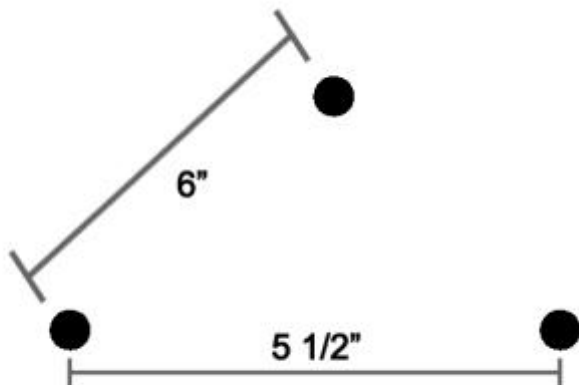

Manufacturer: Hard Chrome

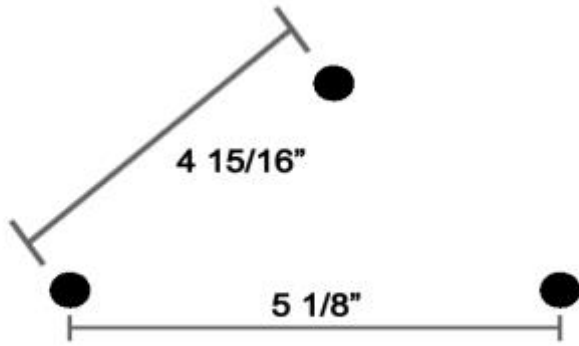

Manufacturer: HK Billet

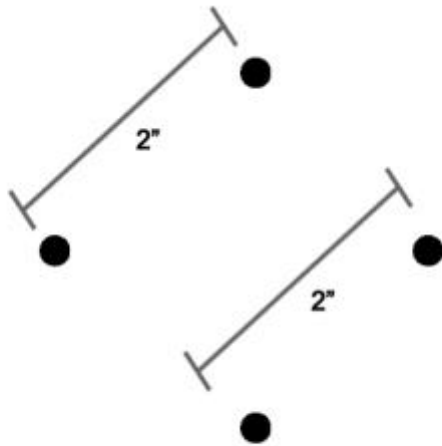

Manufacturer: Calvary Customs