

Tri Glide

2014 to 2016 models

TOUR PACK RELOCATION PLATE KIT

Installation kit

Relocation plate = 1 pc


Screws ¼”-20 c/s flat head x ¾” long = 4 pcs

Nuts ¼”-20 Nyloc nuts = 4 pcs

Washers ¼” = 8 pcs

Remove the seat

1. Unplug the wiring connectors between the trunk and the bike.
2. Remove the six nuts under the trunk holding the trunk frame, save for re-use.
3. Lift the trunk with trunk frame attached off the Trike and place it on a protective surface.
4. Remove the 4 nuts holding the frame onto the trunk and save for re-use.
5. Place the relocation plate onto the trunk frame in the most rear position and install the four supplied flat head screws with nuts and washers into the countersunk holes and tighten.
6. Use a 5/16” drill and drill through the 2 front holes in the plate through the trunk frame (this position gives you the two inch back trunk position) Pic #1.
7. Now reinstall the trunk frame with the relocation plate attached onto the trunk using the original 4 nuts.
8. Install the trunk now onto the Trike and use the original 6 nuts to secure.
9. Plug in all of the wiring connectors.

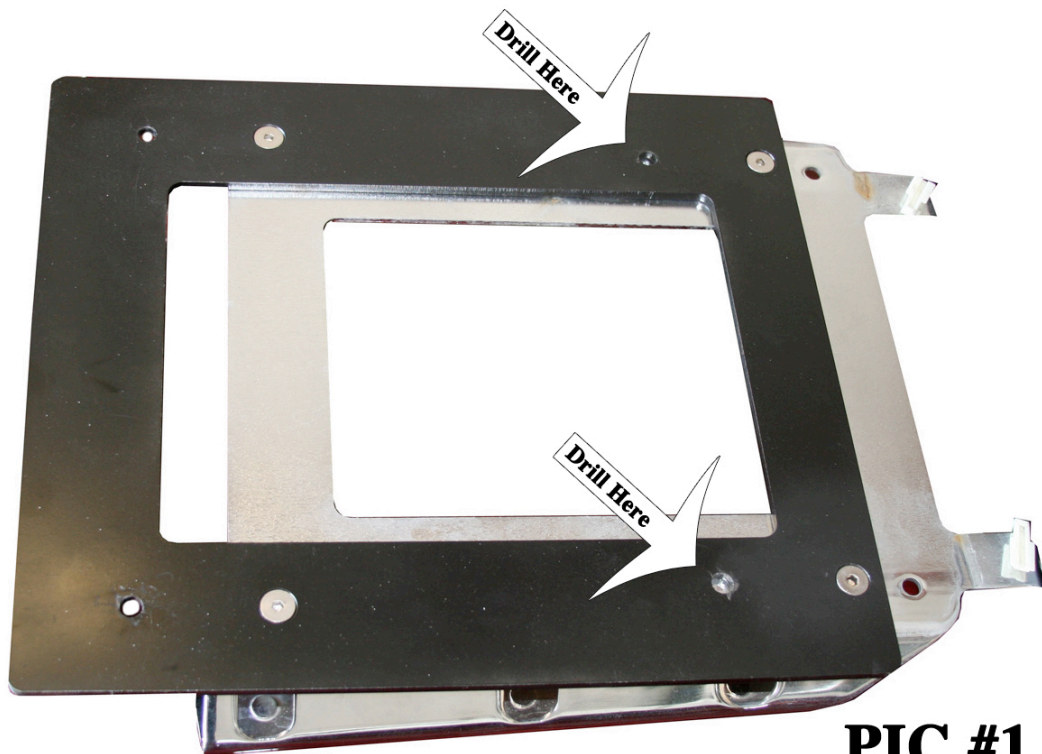

PIC #1

Questions ??? call us on 1-877-672 0288

or email des@ultimateseats.ca

Web site – www.ultimateseats.ca