



USA • 877.672.0288 Canada • 800.818.6868


Ultimate Seats

Put Your Butt In Comfort Heaven


Honda OEM Passenger Backrest Pad Bolt Hole Measurements

Note: All measurements are taken from center bolt to center bolt.

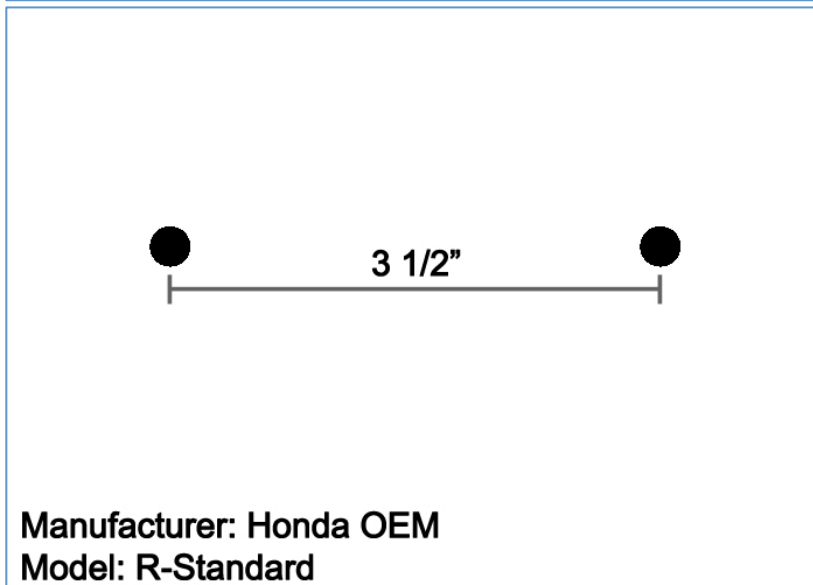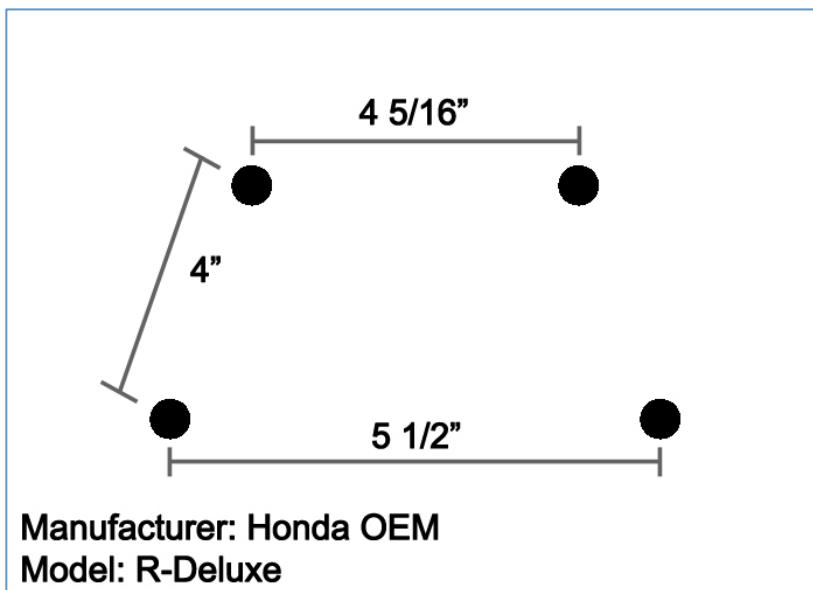


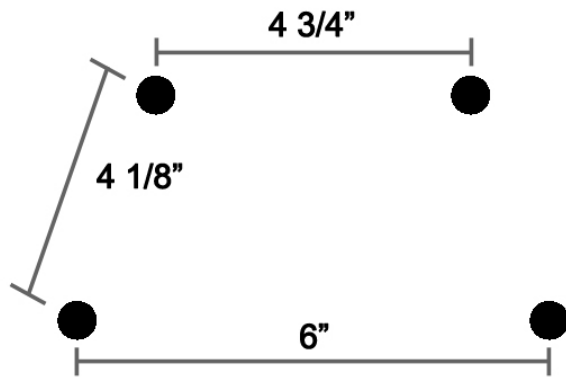


Manufacturer: Honda OEM
Model: Neo Deluxe Tall

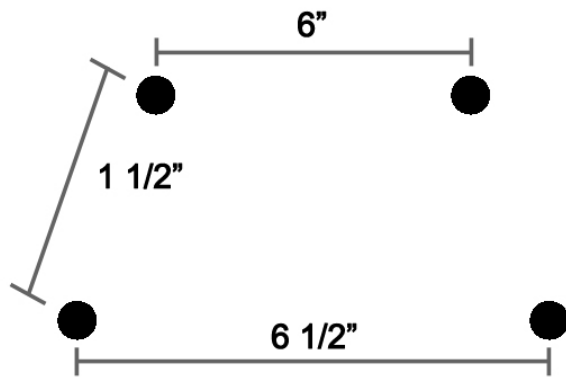


Manufacturer: Honda OEM
Model: Neo Deluxe Low




Manufacturer: Honda OEM
Model: Low Deluxe

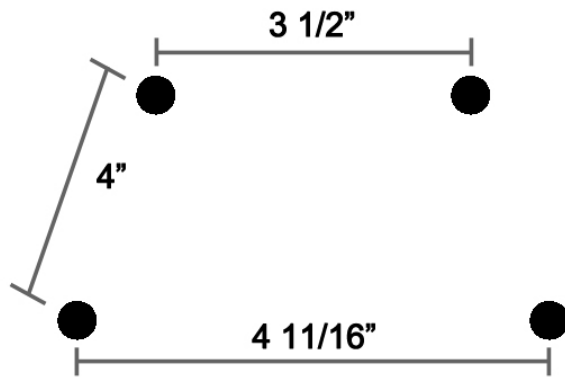

Manufacturer: Honda OEM
Model: C-Deluxe

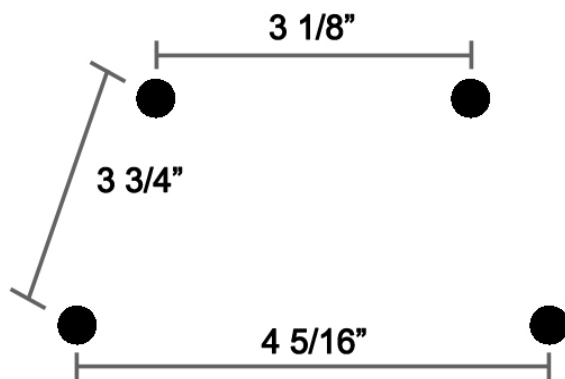

Manufacturer: Honda OEM
Model: Sport Custom

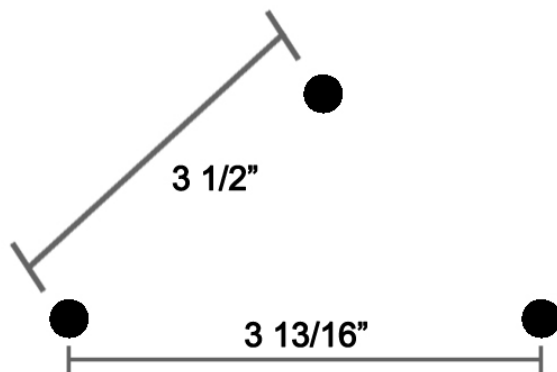

Manufacturer: Honda OEM
Model: Standard / Tourer