

Can-Am Spyder F3 – all models
Stock seat backrest
Ultimate – Driver backrest Installation

Tools needed to install driver backrest

Torque wrench # T20

Torque wrench # T30

Allan key 4 mm

Install Kit includes:

Stainless spacers 7/8" long x 5/8 dia. = 2 pc.


M6 flat head bolts x 2" long = 2 pc.

M6 button head screw x 1" long = 1 pc.

Washer 1/4" flat = 1 pc for F3T only

1. Remove the stock passenger seat and driver seat and remove the tool kit from the passenger seat.
2. Remove the two screws as shown in Pic.1 and one screw as shown in Pic. 2.
3. Install the two spacers. Pic 3.
4. Place the bracket on the frame and Install the two M6 x 2" long flat head bolts.
5. Install the M6 x 1" long screw into the back hole in the support bracket (replaces Pic 2. screw)
6. **Note; for F3T model only** cut off this plastic cable hook with side cutters Pic 6. and use the 1/4" flat washer under the bracket.
7. Place toolkit here – See Pic 4.
8. Re install both seats onto the Spyder and install the driver backrest Pic 5.


Enjoy the ride again with your Ultimate driver backrest

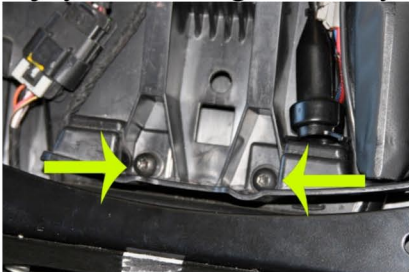

Pic 1



Pic 2

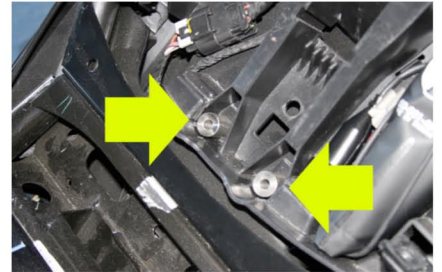

Pic 3



Pic 4



Pic 5



Pic 6

Questions ?

877-672-0288

des@ultimateseats.ca

www.ultimateseats.ca