

Can-Am Spyder F3 / F3S

(Will not fit F3T or Limited models)

Stock seat passenger backrest

Ultimate – passenger backrest Installation

Tools needed to install passenger backrest

Torque wrench # T20

Torque wrench # T30

Allan key 4 mm


Install Kit includes:

M6 button head screw x 1" long = 1 pc.


M6 button head screw x ½" long = 1 pc.

1. Remove the stock passenger seat.
2. Remove the two screws as shown in Pic.1 and one screw as shown in Pic. 2.
3. Place the bracket onto the frame and reinstall the 2 stock screws (do not over tighten)
4. Install the M6 x 1" long screw with the stock washer into the back hole in the support bracket (replaces Pic 2. screw)
5. Install the backrest into the bracket and use the supplied M6 x ½" long button head screw pic 3.
6. Re install the seat onto the Spyder Pic 4.


Enjoy the ride again with your Ultimate passenger backrest

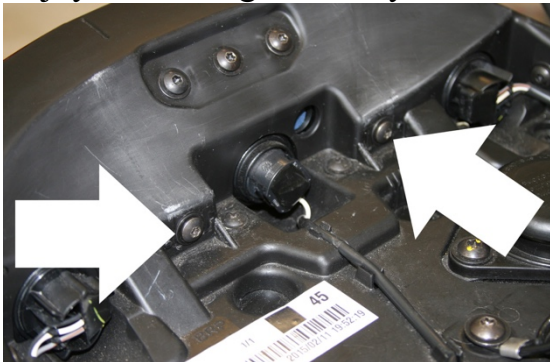

Pic 1

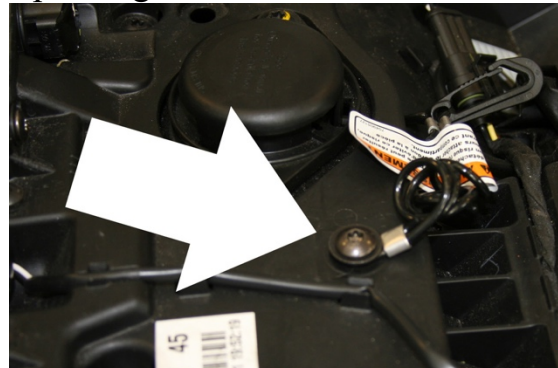

Pic 2

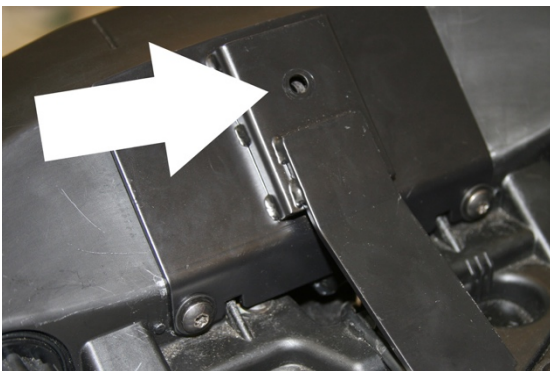

Pic 3



Pic 4

Questions ?

877-672-0288

des@ultimateseats.ca

www.ultimateseats.ca