

Can-Am Spyder F3 – All Years **Ultimate – Heated Seat Wiring Harness**

Installation Kit (Included)

Power supply wire harness

1. Follow provided instructions to remove stock seat.
2. Remove the left hand access panel.
3. Open front trunk.
4. Remove left hand fairing.
 - a. Remove 3 Tuflok Plastic Rivets in Pic 1
 - b. Remove 2 bolts in Pic 2
 - c. Remove 2 bolts in Pic 3
5. Run the wire as shown in Pic 4. Routing the wire behind the fairing and through the frame.
6. Find the accessory wire that is under the left hand access panel. It will most likely be zip tied to another wire. (Pic 5). Cut the factory sealed wire end off then strip the wires ½”.
7. Connect the two wires into the empty side of the wiring harness connector. Pic 6
8. Zip tie wires to OEM harness as needed.
9. Reinstall left hand fairing.
10. Reinstall left hand access panel.
11. Plug seat into the harness.
12. Install the seat.



Pic 1




Pic 2



Pic 3



Pic 4

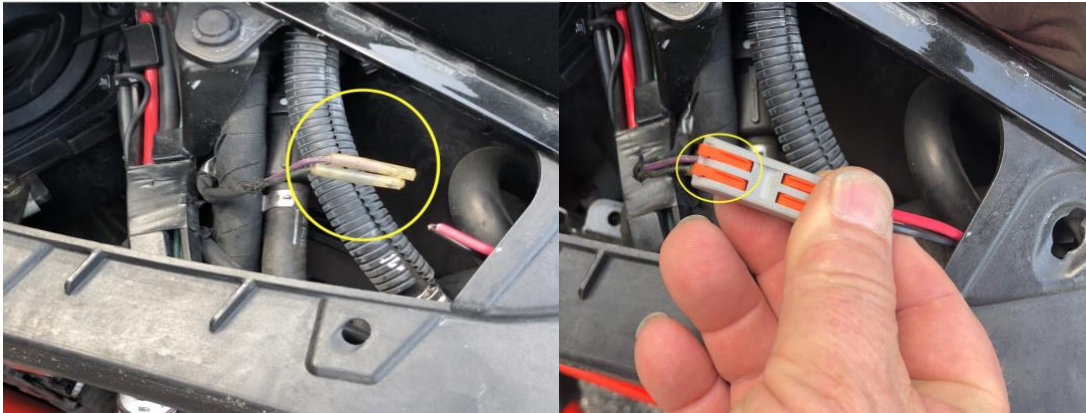

Pic 5

Pic 6

**Questions?
877-672-0288
des@ultimateseats.com
www.ultimateseats.com**