

# Can-Am Spyder F3

## Seat install instructions – all models

### Tools needed to change seat

Open wrench 10 mm = 1  
Open wrench 13 mm = 2  
Socket 10 mm and extension  
**(5/16" washer for latch pin - supplied)**


### Install kit for passenger backrest

6 mm x 1/2" long button head screw = 1  
4 mm Allan key = 1

1. If you have the Can-Am quick release passenger sissybar remove it.
2. Remove passenger seat.
3. Remove driver seat – 2 x 6 mm bolts. (socket 10 mm)
4. Remove the latch pin and washer from the passenger seat.
5. Adjust the latch pin length by loosening the two lock nuts and measure as per **pic. 1**.  
(Two open 13 mm wrenches)
6. Now install the latch pin with washer into the Ultimate seat and tighten it down.  
No need to install the spring or tether plate.

If you have the Ultimate passenger backrest install it now into the receiving bracket in the back of the seat and install the provided 6 mm x 1/2" long button head screw to lock it in.

7. Install your Ultimate seat with the two locators under the tank and latch it down.

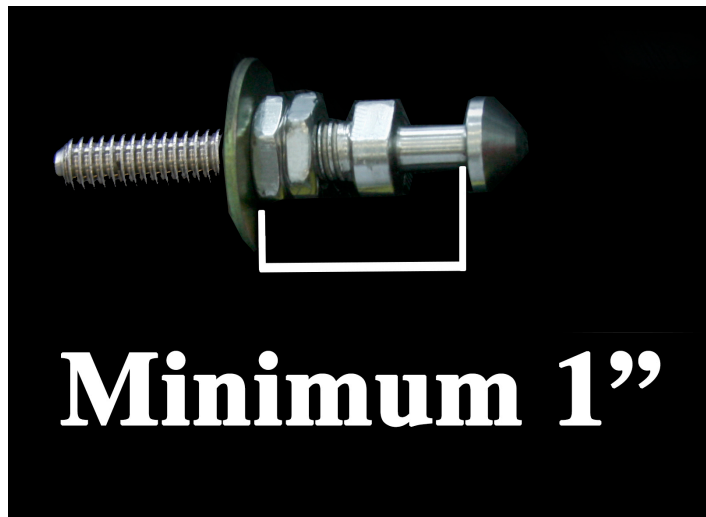

Enjoy the ride again on your Ultimate seats.

**Questions ?**  
**877-672-0288**  
**des@ultimateseats.com**  
**www.ultimateseats.com**