

Softail
2018 and Up Models
Heritage and Deluxe

TOUR PACK RELOCATION PLATE KIT

Installation kit

Relocation plate = 1 pc

Screws ¼” – 20 c/s flat head x ¾” long = 4 pcs.


Screws ¼” – 20 button head x ¾” long = 4 pcs.

Nuts ¼” – 20 Nyloc nuts = 8 pcs.

Washers ¼” = 8 pcs

Remove the seat first

1. Remove the four nuts under the trunk holding it to the frame.
2. Lift the trunk off the bike frame and place it on a protective surface.
3. Place the relocation plate onto the bike trunk frame in the most rear position and install the four supplied flat head screws with nylock nuts and washers into the countersunk holes and tighten.
4. Use a 5/16” drill and drill through the 2 front holes in the plate through the trunk frame (this position gives you the two inch back trunk position) Pic #1.
5. Install the trunk now onto the relocation plate and use the supplied button head screws and nylock nuts and washers to secure.

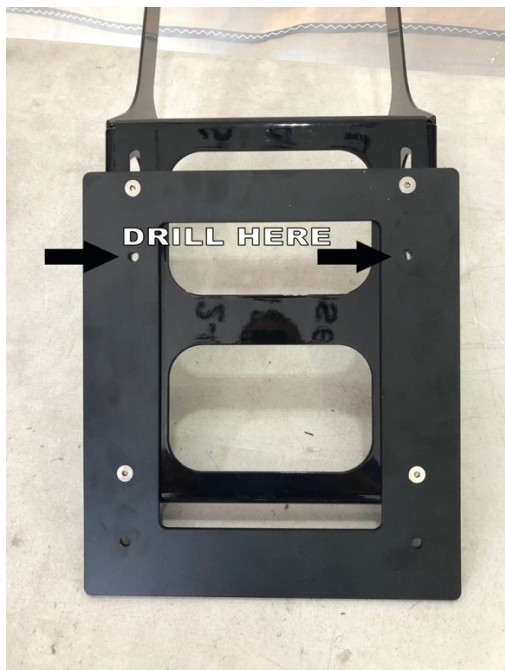

Questions ??? call us on 1-877-672 0288

or email des@ultimateseats.com

Web site – www.ultimateseats.com